



Rain Wear Jackets Sizing Charts

Choosing the correct size in safety apparel is crucial for optimal protection and performance.

For an accurate size and fit in Global Glove rain wear jackets, please refer to the following general sizing dimensions.



RSP810

SIZE	BODY LENGTH	ACROSS CHEST	SLEEVE LENGTH (FROM CENTER BACK)
SMALL	29	25	34
MEDIUM	30	26	35
LARGE	31	27	36
XL	32	28	37
2XL	33	29	38
3XL	34	30	39
6XL	37	33	42

R8900

SIZE	BODY LENGTH	ACROSS CHEST	SLEEVE LENGTH
SMALL	28.5	24	29
MEDIUM	29.5	25.5	30
LARGE	31.5	26.5	31
XL	33.5	28	33
2XL	34.5	29.5	35
3XL	35.5	31	36
4XL	36	32.5	37
5XL	36.5	34	37
6XL	37	35	37.5
7XL	37.5	36.5	38
8XL	38	38.5	38.5

R6400

SIZE	BODY LENGTH	ACROSS CHEST	SLEEVE LENGTH (FROM CENTER BACK)
SMALL	30	25	35
MEDIUM	31	26	36
LARGE	32	27	37
XL	33	28	38
2XL	34	29	39
3XL	35	30	40
4XL	36	31	41
5XL	37	32	42

ALL MEASUREMENTS IN INCHES

Estimate size to the closest fit.
Body proportions may vary.