



Rain Wear Pants Sizing Charts

Choosing the correct size in safety apparel is crucial for optimal protection and performance.

For an accurate size and fit in Global Glove rain wear pants, please refer to the following general sizing dimensions.



RSP810

SIZE	RELAXED WAIST	LEG LENGTH (OUTSIDE)	LEG LENGTH (INSEAM)
SMALL	26	39	27
MEDIUM	26	41	28
LARGE	27	42	29
XL	27	44	30
2XL	29	45	31
3XL	29	47	32
6XL	31	51	35

R8900

SIZE	AROUND WAIST	LEG LENGTH (OUTSIDE)	LEG LENGTH (INSEAM)
SMALL	43.2	41.5	28
MEDIUM	46.2	42.5	29
LARGE	49.2	43.5	30
XL	52.2	44.5	30.5
2XL	55.2	45.5	31
3XL	58.2	46.5	32
4XL	61.2	47.5	33
5XL	64.2	49	34
6XL	67.2	50.5	35
7XL	70	52	35.5
8XL	73	53	36

R6400

SIZE	RELAXED WAIST	LEG LENGTH (OUTSIDE)	LEG LENGTH (INSEAM)
SMALL	27	39	27
MEDIUM	27	41	28
LARGE	29	42	29
XL	29	44	30
2XL	31	45	31
3XL	31	47	32
4XL	32	48	33
5XL	32	50	34

ALL MEASUREMENTS IN INCHES

Estimate size to the closest fit.

Body proportions may vary.