



ARSENAL[®] 5303 EXTENSION LADDER CARRIER KIT



For translated product information / Para obtener informacion traducida del product / Pour obtenir des informations traduites sur les produits: ergo.zone/translations

Arsenal 5303 Kit Includes:



Anchor Straps with Plugs



Shoulder Strap



Center Carrying Handle



Securing Strap

*Arsenal 5304 includes center carrying handle & securing strap.

*Arsenal 5305 includes anchor straps with plugs & shoulder strap.

The Arsenal[®] Extension Ladder Shoulder Lifting Strap and Carrying Handle is designed for ease-of-use and to provide a convenient and ergonomic way for workers to carry and transport a ladder. The product is not intended for hanging ladders for storage purposes.

WARNINGS: All warnings and instructions must be read and understood before using the product. Failure to do so may result in property damage, loss, serious injury or death.


- Always inspect product prior to, and after, each use (refer to INSPECTION instructions).
- Never modify or alter the product in a way that would affect the integrity of the product.
- Follow all instructions and note any warnings on any ladder the product is used with.
- Always ensure straps and other portions are installed on the product in a way that does not cause trip hazards or any other hazard when using the ladder. Ensure the shoulder strap is removed or tucked into the elastic pocket when not in use.
- Use extra precautions around moving machinery or parts, electrical hazards, chemical hazards or other apparent hazards.
- Use added precautions and consult with ladder manufacturer when used in non-conductive environments.

INSTRUCTIONS FOR INSTALLING PRODUCT ONTO A LADDER

1. Insert one end strap into one of the rungs.



2. Pull the strap up through the rung.

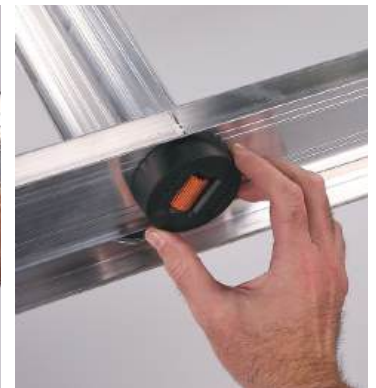

3. Slide the strap through the opening of the rubber plug.



4. Fully insert the strap into the rubber plug.



5. Push the rubber plug down into the rung until it stops.



6. Pull the d-ring upward until the strap is securely tightened.



7. Repeat these steps with the other strap, leaving two open rungs between them for the carrying handle.



8. Insert open end of the handle strap into one of the rungs.



9. Slide the strap through to the other side.



10. Pull the strap through the rung until the handle is centered on the top.



11. Insert the end of the strap into the next rung over.



12. Pull strap through to the top of the rung.



13. Insert the strap into the inner section of the buckle.



14. Insert the strap back through the outer section of the buckle, pull tight.



15. When tight, feed the remaining strap back into the rung to keep it out of the way.



16. Insert securing strap into the gap in the strap under the Ergodyne logo.



17. Pull it through and wrap it around both sides of the ladder.



18. Insert the end into the D-ring, fold it back onto itself, pull tight, and secure it to the hook and loop section.



19. Clip shoulder strap to anchor strap metal D-rings When fully installed, the system should use the four middle rungs of the extension ladder.



INSTRUCTIONS FOR TRANSPORTING A LADDER

1. Ensure the ladder is collapsed to its shortest length
2. Lift the ladder using the grab handle and shoulder strap. For smaller, lighter ladders it may not be needed to use both the grab handle and shoulder strap, but one or the other may suffice.

NOTE: Shoulder straps and carry handles are not rated for hoisting or statically tested. They are meant for transportation only.

INSTRUCTIONS FOR WHEN A LADDER IS IN USE

1. Remove the securing strap around both sides of the ladder
2. If necessary, detach the shoulder strap and store it in a secure location.
3. The remaining pieces may stay inserted through the rungs, as long as they do not obstruct the ladder's use.

INSPECTION

Inspect product before and after each use. All equipment should be regularly inspected by a competent person. Check the following:

- Examine fabric, webbing, stitching and other soft materials for cuts, tears, heat trauma, frays or other damage.
- Examine all hardware and d-rings for rust or corrosion, abnormal distortion (twists, bends), cracks or breaks or any other damage.

STORAGE AND CARE

When not in use store product in a clean, dry location, away from direct sunlight. Clean using mild soap and water, and then air dry.

DISCLAIMER

In no event, shall Tenacious Holdings, Inc., be liable for any direct, indirect, punitive, incidental, special or consequential damages arising out of, or associated with, the misuse of the Arsenal® Extension Ladder Shoulder Lifting Strap and Carrying Handle.

WARRANTY

We stand behind everything we make and guarantee our products are free of defects in materials and workmanship to the original purchaser for the product's lifetime. Damage, abuse and/or normal wear are not covered. Questions? Call Ergodyne at +1-651-642-9889 (8 a.m. - 5 p.m. CST) or 800-225-8238.



**SEE THE ENTIRE ERGODYNE® ARSENAL®
CARRYING & LIFTING STRAPS LINE OF LADDER
CARRIERS & HANDLES ON ERGODYNE.COM**

ergodyne®

1021 BANDANA BOULEVARD EAST // SUITE 220 // SAINT PAUL, MN 55108
TOLL-FREE 800 225 8238 // INT'L +1 651 642 9889 // ERGODYNE.COM
©2025 ERGODYNE. ALL RIGHTS RESERVED. ALL WRONGS REVERSED.

DESIGNED BY ERGODYNE IN MINNESOTA
MADE IN CHINA // HECHO EN CHINA // FABRIQUÉ EN CHINE

WARRANTY: ERGODYNE.COM/RETURNS-WARRANTY
PATENT WWW.ERGODYNE.COM/PATENTS